
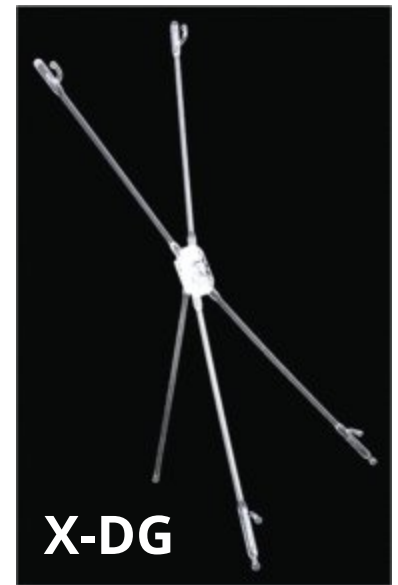


XD - Desktop XBAN Installation

BANNER SIZE:
11" wide by 17" tall

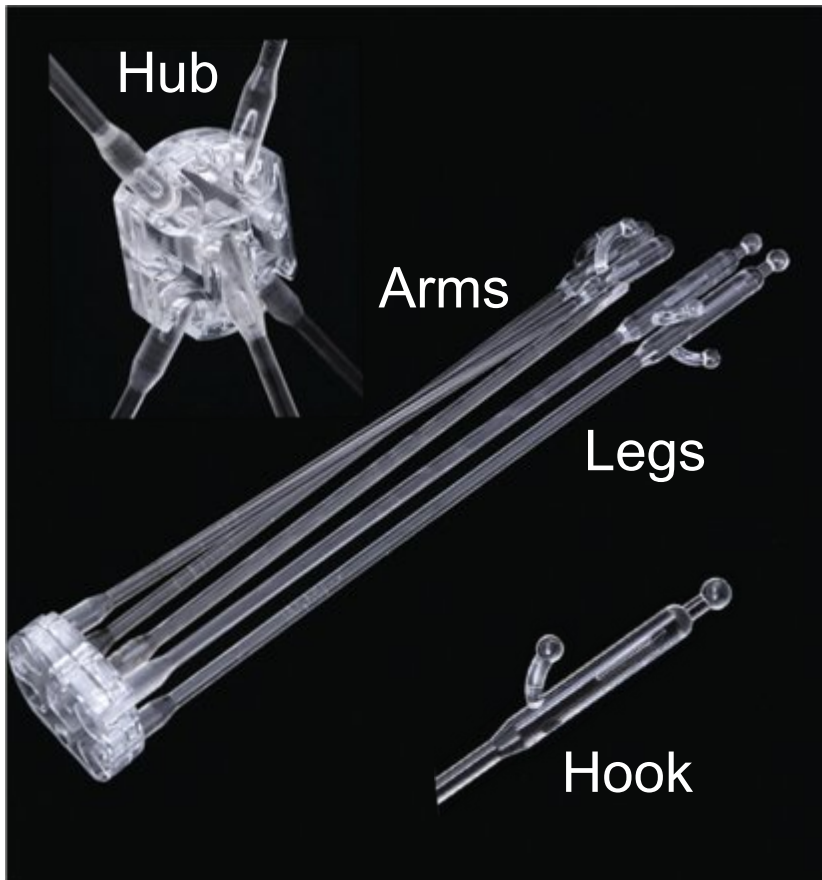

1. Banner must have a grommet or a reinforced hole in each corner and fall within the size range listed above. A standard hole punch works.

2. Open the bottom Legs, Arms and Back Support Leg out and away from the Hub. Wedge them in place on the back of the Hub.

3. Hang the top grommets of the banner onto the Hooks at the top of the Arms.

4. Pull down the banner and hook the bottom grommets onto the Hooks on the Legs.

